



# Black and Decker TR1278B Top Cover Replacement

This guide will show how to remove and replace the front cover of a Black and Decker TR1278B toaster.

Written By: Dominic Gamonez



## INTRODUCTION

To work on the inside of the toaster, the top cover must first be removed. This guide provides instructions on how to remove the top cover.

---



### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Top Cover



- ❗ Unplug the toaster before disassembly.
- Remove the carriage lever by pulling it away from the toaster.

 
## Step 2



- ❗ Toaster will be turned upside down. Clear crumb tray or work over a paper towel.
- Turn the toaster upside down.
- Unscrew all four 4mm screws on the bottom using a Phillip's head #2 (PH2) screwdriver.



### Step 3

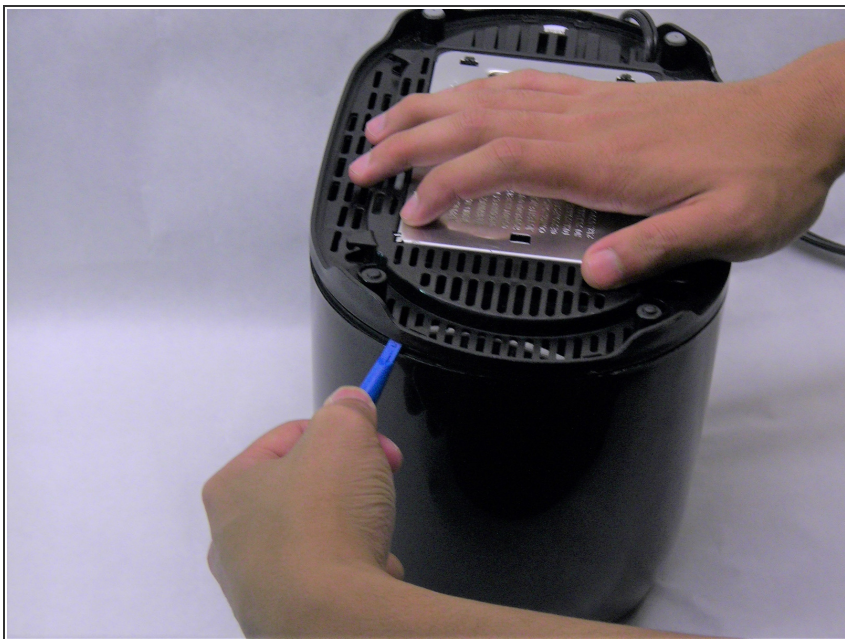


- Detach the bottom from the front cover using the plastic opening tool.

### Step 4



 - Turn the toaster right side up.
- ⚠ Support the bottom. The ribbon cable that connects the toaster to the front cover can be damaged.
- Lift the front cover.
- ⚠ Lift carefully. Again the ribbon cable can be damaged.

## Step 5

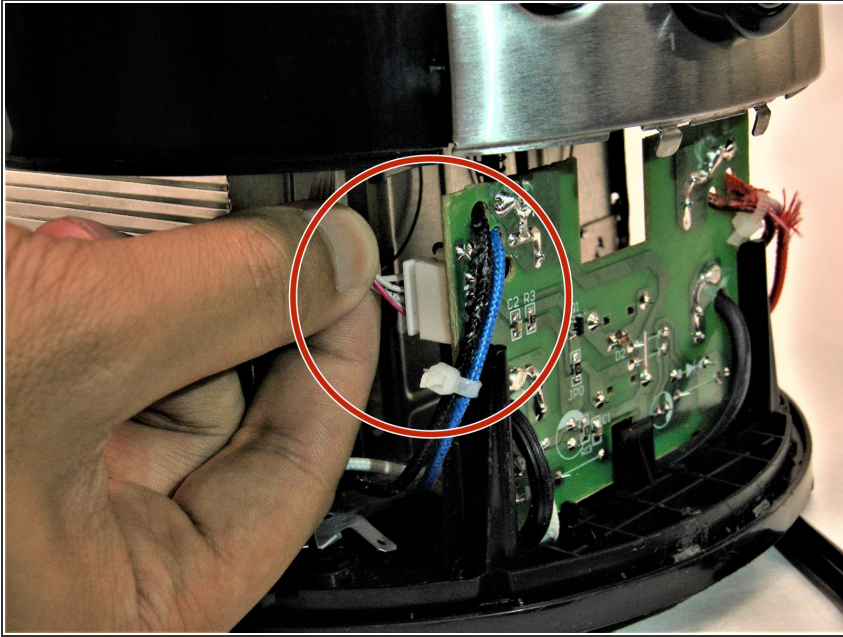

- Detach the bundled cable connector from the toaster by carefully pulling it away from the circuit board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 10:18:02 PM.